



## ECOLUX NEO



Návod k použití  
Bedienungsanleitung  
Instruktionsmanual  
Kasutusjuhend  
Instruction manual  
Manual del usuario  
Käyttöohje  
Manuel utilisateur  
Felhasználói kézikönyv  
Manuale dell'utente  
Vartotojo vadovas  
Brukermanual  
Instrukcja obsługi  
Инструкция по эксплуатации  
Návod na použitie

## SAFETY INSTRUCTION

Congratulations on the purchase of Ecolux Neo, please read these safety instructions carefully before operating the machine and keep it for further reference.

- This product is meant for domestic use only. Professional or incorrect use or failure to comply with the manual, exonerates Lux from any responsibility or guarantee on the product.
- The Ecolux Neo is built in accordance with the safety type IPX 4. Thus it is splash resistant.
- The unit must always be standing horizontally on the wheels. Never place the unit on the cable reel.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand

the hazards involved. Children shall not play with the appliance.

- The appliance shall not be left unattended while it is connected to the supply mains.
- Compare the electric data on the rating plate with the mains voltage, frequency and max. Ampere, these figures have to comply.
- The mains have to be protected by a 16A or 10A fuse and with an earth leakage circuit breaker (FI circuit). The mains needs to be earthed.
- The hose and cord contain electrical components and should be checked regularly.
- Do not use the device if the cord or the unit appears to be damaged.
- In case of damage switch off and unplug the unit and contact a Lux Service Center.
- The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service

agent or similarly qualified persons in order to avoid hazard.

- Any repair must be carried out solely by authorized Lux technicians. Use only Lux ORIGINAL spare parts. Appliances repaired by unauthorized technicians can represent a danger to the users and render the warranty void.
  - Do not try to modify the unit yourself.
  - Do not pull the cord to disconnect the plug.
  - Do not pull the unit so far away from the socket that the cable becomes too stretched.
  - Do not immerse the unit in water.
  - Never point the steam jet on persons or animals.
  - The steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
  - Never aim the steam jet directly at non heat-resistant materials.
  - Never aim steam jet directly at silk, fur, leather or velvet. Before the use on sensitive materials, we recommend that you test it on a hidden area of the surface you intend to clean.
- Steam can loosen wax, furniture polish, plastic coatings or paint and edge band from edges. Do not direct the steam at glued laminated edges as the edge band may loosen. Do not use the appliance for cleaning unsealed wood or parquet floors. Do not use the appliance for cleaning painted or plastic coated surfaces such as kitchen or living room furniture, doors or parquet. To clean these surfaces, steam a microfiber cloth and use it to wipe over the surfaces.
  - Do not use the unit to cook or rework food. Do not use it to fill containers like bottles, bags or balloons.
  - It is not allowed to use the unit to dissolve or remove substances that are dangerous to human health.
  - The symbol on the handle indicates that you can get scalded from the hot steam.
  - Disconnect the unit from the mains before service or cleaning and after its use. Let the unit cool down.



- Only use pure tap water without additives, perfumes or any chemical substances.
- The rinsing apertures that are under pressure, must not be opened during use.
- Do not insert any object in the openings of the appliance and do not use it in case one of the openings is blocked.
- Keep the device in a dry place. Do not expose it to atmospheric agents, humidity or heat.
- Do not use the unit with wet hands or bare feet.
- Improper handling of the steam cleaner, such as the use of distilled water instead of tap water for the operation of the steam cleaner or failure to perform the decalcification process when indicated by the service light, invalidates any warranty claim.

#### Iron for Ecolux Neo (optional)

- This iron complies with EEC Regulations 2014/30/EU and 2014/35/EU.
- Connect this iron only to an Ecolux Neo steam cleaner.



- The iron must not be left unattended while it is connected to the supply mains.
- The soleplate can become very hot and cause burns: never touch these parts.
- Take care that the electrical cords do not get in contact with the hot iron soleplate or with sharp edges.
- The iron must be used and rested on a flat, stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has dropped, if there are visible signs of damage or if it is leaking.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- The surfaces indicated with the symbol IEC 60417-5041 are liable to get hot during use.
- Do not immerse the iron in water.



At the end of its working life, the product must NOT be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources.

As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

## TECHNICAL DATA

### Ecolux Neo

Dimension (HxLxW) (unit only)	42 x 30 x 27.5cm
Weight (unit only)	5.4 kg
Voltage	220-240V / 50Hz
Max. Power	2200W
Max. Pressure	5 Bar


### Iron Neo

Voltage	220-240V / 50Hz
Max. Power	850W

# UNIT DESCRIPTION



## Generator

1. Hose socket
2. Unit Handle
3. Water tank cap
4. Cable holder
5. Cable

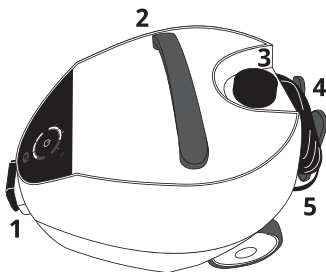

## Display

6. Steam levels
7. ON/OFF button
8. Working time indication
9. Service indication

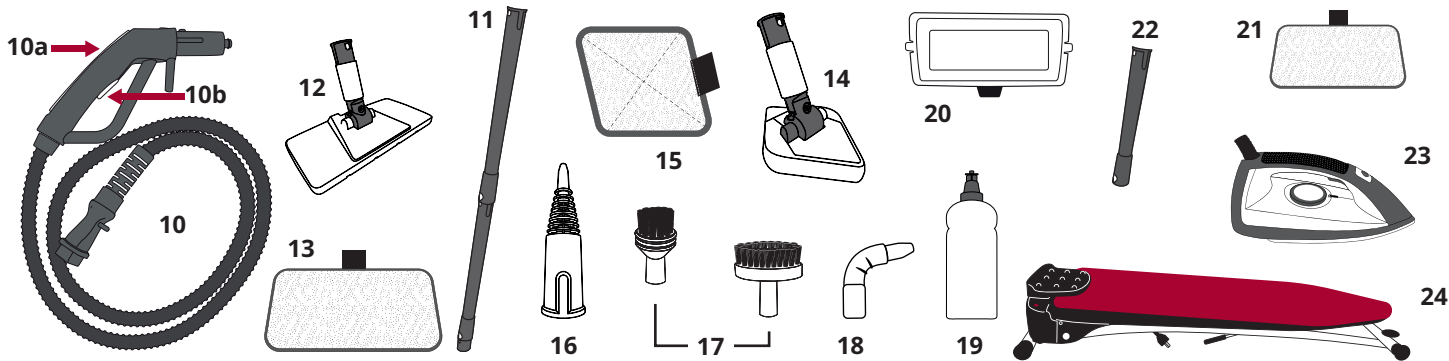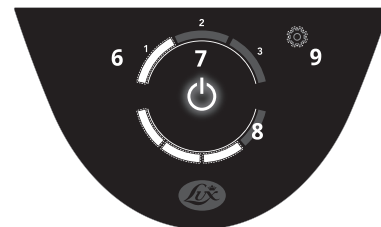

## Accessories

10. Flexible hose
  - a. Steam level
  - b. Steam release
11. Tubes
12. Floor Nozzle
13. Microfiber cloth Floor
14. Diamond Nozzle
15. Microfiber cloth Diamond
16. Pointed Nozzle straight and curved
17. Brushes
18. Curve
19. Bottle

## Optional Accessories

20. Carpet Glider
21. Microfiber cloth Carpet Glider
22. Short Tube
23. Iron Neo
24. Aerostar Neo ironing board


## UNIT DESCRIPTION

### FIRST STEPS



#### Connect the unit

Unwind the cable completely and insert the plug into the mains. The on/off button will flash. Switch on the unit by pressing the on/off button.

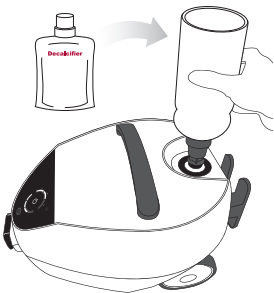


#### Water filling

Fill tap (not distilled) water mixed with Lux Decalcifier into the unit. The pump will fill the boiler. When the pump stops working remove the bottle. After a short break the remaining water will be pumped into the boiler.



#### Unit heating

During the heating time the light of the steam levels flashes. When the unit is ready for use, the steam level lights will stop flashing.

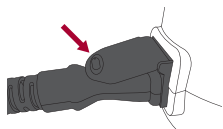


#### Connect the hose

Plug the hose into the unit and secure it with the socket lid.




#### Blocking the steam release

 Before connecting or changing any accessory, always block the steam release by pressing steam level 3 for 3 seconds. The steam release button will deactivate and there will be no steam level indication on the unit anymore. To unblock the steam release, press any of the steam level buttons.



#### Connect the accessories

Always use the hose with an accessory. Connect it by clicking them onto the handle.

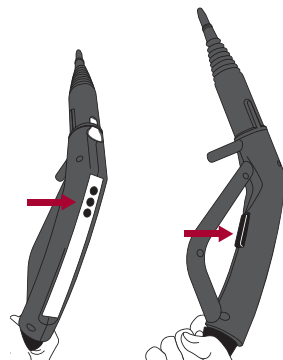












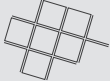


#### Steam levels

Select the steam level on the upper side of the handle. Release steam by pressing the button on the lower side of the handle.

# USAGE

Only use the steam cleaner in the home to clean regular dirt from surfaces that can withstand high temperature, pressure and moisture.

Only use the steam cleaner indoors and do not store it in sub-zero temperatures.

	Cleaning area	Accessory	Steam level
Kitchen			
			
			
			
			



	Cleaning area	Accessory	Steam level
Bathroom			
			
			
Living room			
			
			
			



## ACCESSORIES

### Floor Nozzle

Connect the tubes and the floor nozzle to the hose.  
Press the nozzle onto the cloth.

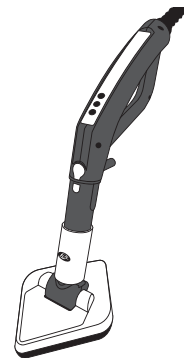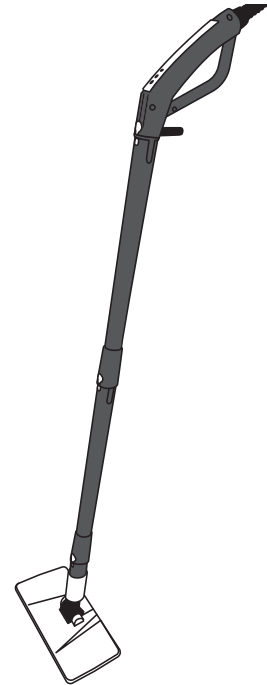


### Diamond Nozzle

Connect the diamond nozzle to the hose handle. Press the nozzle onto the cloth.


Cleaning area		Accessory	Steam level
Nursery			
Outdoor & Hobby			

## ACCESSORIES

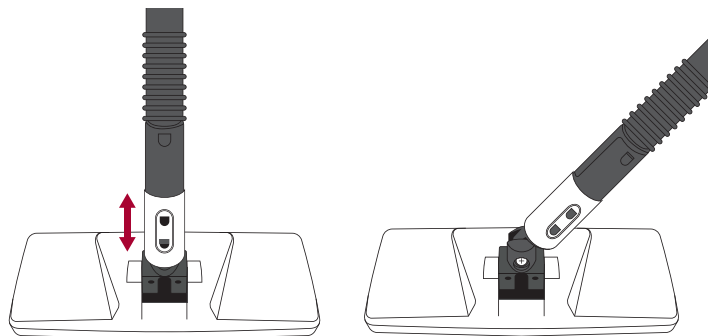


### Block the side movement (optional)

Block the side movement of the cleaning head by sliding the lock in place. To remove it, press the button in the back of the locking and slide it up.

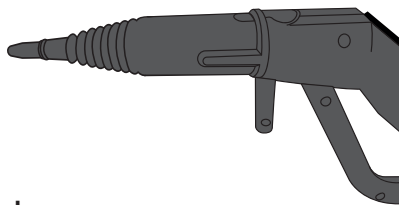


### Pointed Nozzles

Connect one of the pointed nozzles to the handle. The pointed nozzles can be used to steam surfaces from a distance or to clean narrow spaces like faucet rims, sealings in the dish washer, fridge, shower or similar.

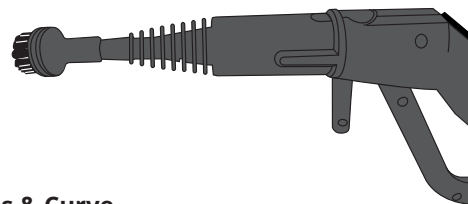

### Brushes & Curve


Connect the brushes or the curve to the pointed nozzle. The brushes add mechanical scrapping to the steam for better pore cleaning and dirt removal.

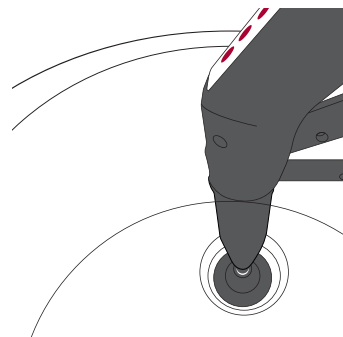

### Drain cleaner


Fix the drain cleaner onto the pointed nozzle. Position it on the faucet drain and steam (level 3). Place a cloth in front of the upper sink opening. Be careful as the sink opening may get very hot and release steam.

## IRON (OPTIONAL)

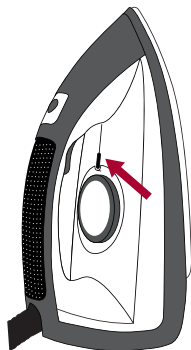


### Setting

Always pay attention to the ironing indication on the clothing label. Plug the iron into the Ecolux Neo and set the temperature. When the lamp turns off, the iron is ready for use.

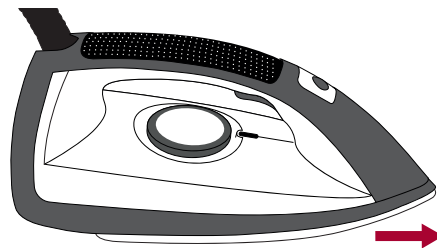

### Proper use

For effective ironing steam only when moving forward, and do not steam when moving backwards. Use steam level 3 only for multiple layer or vertical ironing.

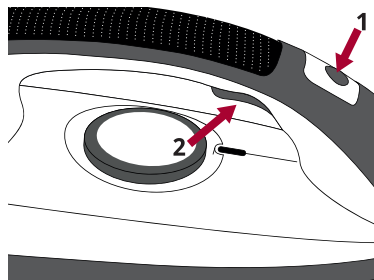


### Steam selection

The iron is set at steam level 2 for optimal ironing. To change the steam level, press the upper button (1). To release the steam, press the lower handle button (2).

## UNIT CLEANING & MAINTENANCE



### Service indication

The service indication turns on, when the unit requires decalcification of the boiler. Unplug the unit and wait until it cooled down completely. Remove the rubber lid on the bottom of the unit. The drain screw under the rubber lid must be cold. Open it slowly and carefully. In case there is still some pressure in the boiler, stop opening it immediately and wait until the pressure is gone. Empty the boiler over the sink. In case no water comes out, the drain could be blocked by calcification which has to be pushed through (use the Allen key).

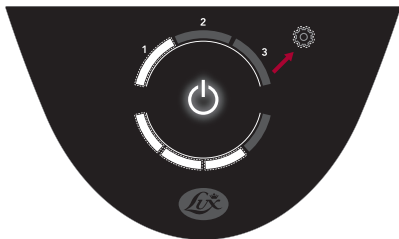

### Boiler decalcification

Turn the unit upside down. With the refill bottle fill 1.2 litres ready to use decalcification liquid (suitable for kettles) from the bottom into the boiler. Add another full refill bottle of tap water. Close the screw gently (<math><8\text{Nm}</math>). Turn the unit on its wheels. Wait for 15 minutes. Empty the boiler over the sink.

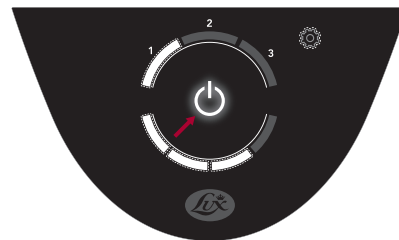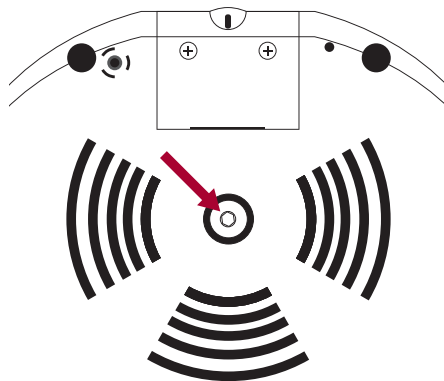

### Reset

Close the screw gently (<math><8\text{Nm}</math>) and plug in the unit. Press the ON/OFF button for 10 seconds, until the service indication turns off.

### Preventive liquid for Ecolux Neo

Pour one bag into the refill bottle of the Steam Cleaner and fill it up with tapped water. Fill the mixture into the tank of the Steam Cleaner. Use for every refill.



## TROUBLESHOOTING

Problem	Cause	Correction
The display stays dark.	The power supply is interrupted.	Check if the unit is connected properly to the mains.
	There is no electricity supplying the unit.	Check the socket of the power supply and the fuse.
The unit does not steam.	The steam valve is locked.	Press any steam level on the hose handle.
	There is no water in the boiler. The red light is illuminated.	Fill water into the tank.
	The hose is not plugged in properly.	Plug in the hose and secure it with the socket lid.
	The unit is heating up.	Wait until the temperature has been reached.
The water pump does not work.	The boiler is full, 4 lights are shining steadily.	No water needed – check the display.
	The unit is standing in an unsuitable position.	Make sure the unit is standing horizontally.
	The water is too soft.	Add a small teaspoon of salt to the water in the tank.
	There is distilled water in the boiler.	The steam cleaner is designed to operate with tap water only. Drain the distilled water from the boiler and replace it with tap water.
The service symbol does not switch off.	The cleaning process has not been performed according to instructions.	Follow the instructions step by step, making sure you disconnect the unit when needed.
The neck of the cleaning head is not turning.	The lock is inserted.	Loosen the locking on the cleaning head neck.
The unit releases steam from the bottom of the device.	The safety valve has been activated.	Unplug the unit and call the Lux Service Center.

In cases where the problem cannot be solved, call the Lux Service Center. Do not, under any circumstance, operate a faulty unit.

DE

Allclean Reinigungs- und  
Umwelt-Technik GmbH  
Steinbergstraße 3  
04288 Leipzig  
+49 (0) 34297 609 610  
E-mail: INFO@ALLCLEAN.DE  
www.luxinternational.com/de

AT

Lux Österreich GmbH  
Concorde Business Park 1/B3/31  
2320 Schwechat  
Österreich  
Tel: +43 1 706 42 52  
E-Mail: oesterreich@luxaustria.at  
www.luxinternational.com/at

CH

Jsk Marketing GmbH  
Baumgartenstrasse 331  
CH-4715 Herbetswil (SO)  
Switzerland  
Tel: +41 (62) 557 12 69  
E-Mail: jsk-marketing@bluewin.ch

CZ

Lux Czech s.r.o.  
Poděbradská 786/65a  
198 00, Praha 9 – Hloubětín  
Tel: +420 220 000 871  
E-mail: info@luxczech.cz  
www.luxczech.cz

Lux

Lux International AG  
Neue Winterthurerstrasse 30  
CH-8304 Wallisellen / Zürich  
Switzerland  
Tel: +41 41 768 88 88  
E-Mail: contact@luxinternational.com  
www.luxinternational.com

DK

N2C ApS – Lux Danmark  
Lerbækvej 8  
2680 Solrød Strand  
Tel: +45 43 44 44 00  
E-mail: info@nordic2care.com  
www.nordic2care.dk

EE

Lux Eesti OÜ  
Vabaduse pst 13  
EE-11214 Tallinn  
Tel: + 372 67 44 700  
E-mail: info@luxeesti.ee  
www.luxeesti.ee

ES

Lux Welity Spain SL  
Calle Pez Volador 32, Bajo C  
ES - 28007 Madrid  
Tel: 91 557 1128  
www.lux.es

F

Lux France  
36 Rue de la Gare d'Ivoy  
F-18380 Ivoy le Pre  
Tel: 02 4858 0455  
www.france-purification.com

FI

L&D Direct Oy  
Merivirta 9  
02320 ESPOO'  
Finland  
www.luxkoti.fi  
Tel: +358 207638399  
E-mail: asiakaspalvelu@luxkoti.fi

HU

Lux Hungária Kereskedelmi Kft.  
Jávor utca 5/a.  
1145 Budapest  
Magyarország  
Tel: +36 1 422 4444  
E-Mail: info@luxhungaria.hu  
www.luxhungaria.hu

IT

D.E.S. S.r.l.  
Via Perugino 10  
24068 Seriate (BG)  
Italia  
Tel: 800 098 436  
E-Mail: info@des-lux.it  
www.viveresano.eu

LT

UAB Lux Lt  
Smėlio g. 10  
10324 Vilnius, Lithuania  
Tel. +370 650 28 803

LV

LUX RIGA SIA  
ĶENĢARAGA 1A - 402  
Mobile: +371 277 18 555  
Mobile: +371 277 18 444  
E-mail: luxriga@gmail.com  
www.luxlatvija.lv

NO

Lux Norge AS  
Kniveveien 29  
NO-3036 Drammen  
Tel. (+47) 22 74 99 90  
E-mail: post@lux.no  
www.luxinternational.com

PL

Lux Welity Polska Sp. z o.o.  
Międzyborska 27a  
PL-60-162 POZNAŃ  
+48 61 22 177 99  
E-mail: biuro@luxpolska.pl  
sklep.luxpolska.pl

SK

Lux-Slovensko, s. r. o.  
Žerotínova bašta 10  
940 01 Nové Zámky  
Tel.: +421221201399  
E-mail: info@luxslovakia.sk

More information



