

Safety Instructions

Please read these safety instructions carefully before use and keep them for future reference.

Intended Use

- Use the electric power cleaning nozzle only with suitable Lux vacuum cleaners.
- Use only for dust and dry materials. Never vacuum people or animals with the electric power nozzle. Any other usage, modifications or changes are not permitted.
- This appliance can be used by children aged 8 or over and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised when using or have received instructions for using the machine safely and understand the possible dangers.
- Children should not play with this device. The cleaning and maintenance must not be carried out by children unless supervised by an adult.

Technical Safety

- Always ensure the machine is switched off and disconnected from the electricity supply before any changes, cleaning or maintenance are carried out.
- Operate the unit only in

accordance with this manual.

- Check before operating whether the voltage indicated on the bottom of the device matches the local mains voltage.
- Do not use the machine if it is damaged. Ensure that any damaged parts are only replaced by authorised Lux Service personnel.
- Do not immerse the machine in water and only use a dry or slightly damp cloth to clean the motor brush.

Correct Use

- Do not use for hot or burning materials such as cigarettes or ashes.
- Do not use on liquids and damp materials.
- Do not use on easily flammable or explosive materials or gases.
- Be careful that hair, fingers, clothing and the like never come in contact with the rotating roller of the electric power cleaning head.
- Never touch the brush roller while the vacuum cleaner is connected to the mains.
- Never push the electric power cleaning head over the mains supply cable as the cable could be damaged.

Congratulation for choosing PL 1 the new generation Lux motorised furniture nozzle with the patented VACUFLEX™ the flexible bottom plate for a perfect adherence to the surface and an easy cleaning. Please read these operating instructions prior to use of the power nozzle.

► Assembly

Plug in the spiral cable on the power nozzle **1** and connect the PL 1 power nozzle directly to the hose handle. Connection and use with electric hose. Plug in the spiral cable on the hose connector. Connect the hose and its power cord to the unit.

2 Plug in the vacuum cleaner cable in the socket. Make sure that the hose switch is OFF.

Switch on the unit.

3 The power nozzle brush can be turned on/off using the button on the hose handle.

Connection and use with standard hose Plug in the spiral cable on the extension cord.

Fit the hose clips on the hose making sure that the clips are placed at even distances. Fix the extension cord. Connect the hose and the extension cable to the unit.

Plug in the vacuum cleaner cable in the socket. Switch on the unit. The power nozzle will now be switched on/off by switching on/off the vacuum cleaner.

Green light

4 The green light turns on to indicate that the brush is operating.

Removal the PL 1:
Switch off the unit and disconnect it.

► VACUFLEX™

VACUFLEX™ is a patented flexible bottom plate for deep cleaning.

Removal of VACUFLEX™

5 To remove VACUFLEX™ hold the plate at one side edge. With little force turn it down over the small side ramp. The locking of the plate will lift and automatically release itself. Assembly of VACUFLEX™

6 To assembly the VACUFLEX™ click the plate on its lodgement.

► Maintenance

Always switch off the unit and plug off the power cord before cleaning the power nozzle. Clean regularly the PL 1 after the use.

Cleaning of the brush

If threads and other matters get caught in the brush roll, **7** remove the VACUFLEX™ carefully cut along the cutting groove of the roller, being careful not to damage the brush; then switch on the vacuum cleaner to suck in the loosen threads. The power nozzle can be wiped clean with a damp piece of cloth.

Automatic switch-off function

If the brush is blocked the motor switches off automatically. In this case switch off the unit, remove whatever item has blocked the brush, and switch it on again. If the power nozzle does not start again after this procedure, contact your local Lux service centre.

► Optional accessory

Adapter for using the nozzle together with previous vacuum cleaner models.

► Application

8 Cleaning with VACUFLEX™

Use VACUFLEX™ to deeply clean mattresses, couches, sofas, car seats and all kind of fabric upholstery. The plate stretches the fabric surfaces creating a vacuum effect. This combined with the suction performance of the Lux 1 will guarantee a deep efficient cleaning. The VACUFLEX™ high flexibility moreover makes the use of the power nozzle light and simple.

9 Cleaning without VACUFLEX™

Remove VACUFLEX™ to clean stairs and small carpets. Those require air flow in order to allow an optimal dust pick up.

Technical Data

Dimensions (cm)	28 x 19 x 9
Weight (g)	532
Brush width (cm)	15
Wattage (W)	20
Voltage (V)	230